



Solutions Start Here



NT910 G1 user manual

29.08.2024

Release 1.1

Contents

- 1.1 General information2
- 1.2 Contact support2
- 1.3 Important notice3
- 1.4 Safety and hazards3
- 1.5 Conventions used in this manual3
- 1.6 Related documentation.....4
- 1.7 Abbreviations.....4
- 1.8 Revision history5
- 2.1 Overview.....5
- 2.2 Identification.....7
- 2.3 Physical dimensions and weight7
- 2.4 Product features and technical data8
- 2.5 Telic certified accessories9
- 3.1 Audience and intended use.....11
- 3.2 Safety instructions11
- 3.3 General precautions12
- 3.4 SIM card precautions.....13
- 3.5 Antenna precautions13
- 3.6 Storage conditions14
- 4.1 Power connector14
- 4.2 SIM card reader16
- 4.3 RS232 serial port16
- 4.4 Mini USB connector17
- 5.1 Switch ON the modem17
- 5.2 Configuration of the bit rate on the serial interface19
- 5.3 AT Command syntax and response format19
- 5.4 Power off the modem19
- 5.5 Reboot the modem.....21
- 5.6 Using low power mode of the modem22
- 5.7 Operating states / green LED22
- 5.8 Status LEDs (one yellow, one red).....23
- 5.9 Current consumption measurements24
- 5.10 Additional configuration24
- 6.1 Where to install the modem.....25
- 6.2 How to install the modem26
- 6.3 Antenna26

1 General terms and conditions

This technical description contains important information for the installation and use of the NT910 G1 terminal. Read it carefully before you start working with the NT910 G1 terminal.

We cannot be held responsible for material loss or personal injury that is due to non-compliance with the safety instructions. The warranty will be void in such circumstances.

Telic reserves the right to change the included information without prior notice and does not take responsibility for errors in the document and/or for any missing information.

1.1 General information

This Installation Manual consists of the following chapters:

Chapter	Description
1	General Information provides basic information such as the conventions for the warning levels, applicable related documentations, used abbreviations, a revision history and contact information.
2	Product Description provides a brief overview about the mechanical specification of the product (including size and weight) as well as an overview of the functions and features of the device as well as the available accessories.
3	Safety and Product Care addresses the audience for this manual, the intended use of this device and safety-related information important to read before using the device.
4	Electrical Description describes the electrical characteristics and pin allocation of the device's connectors.
5	Operation provides details relating to the commissioning of the device, including details on activating special features such as the low power mode.
6	Installation of the modem provides important instructions about how to install the device for the M2M application.

1.2 Contact support

Information about Telic AG, products, and accessories, including FAQs, are available from the following web site: <http://www.telic.de>.

1.3 Important notice




Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost. Although significant delays or losses of data are rare when wireless devices such as the NT910 G1 terminal are used in a normal manner with a well-constructed network, the NT910 G1 should not be used in situations where failure to transmit or receive data could result in damage of any kind to the user or any other party, including but not limited to personal injury, death, or loss of property. Telic AG accepts no responsibility for damages of any kind resulting from delays or errors in data transmitted or received using the Telic AG product, or for failure of the Telic AG product to transmit or receive such data.

1.4 Safety and hazards

Do not operate the Telic AG product in areas where blasting is in progress, near Hazards medical equipment, near life support equipment, or any equipment which may be susceptible to any form of radio interference. In such areas, the Telic AG product **MUST BE POWERED OFF**. The Telic AG product can transmit signals that could interfere with this equipment.

1.5 Conventions used in this manual

The following conventions for warning levels are used in this manual:

Warning	
	Warnings against hazards that may result directly in serious injuries or death in case of non-observance.
Caution	
	Warnings against hazards that may result in injuries in case of non-observance.
NOTICE	
Warnings against hazards that may result in material damage in case of non-observance.	
	Indicates that the device can be damaged by electrostatic discharge.



This note contains helpful suggestions or references to material not covered in the document.

1.6 Related documentation

Please consult the download zone of the Telic AG website for additional documents related to NT910 G1, such as AT command manuals. Note that these documents can be accessed online only after you have registered on our website and agreed with our terms of use. Please follow this link to register or create a user account:

<https://www.telic.de/en/our-products/downloads>

1.7 Abbreviations

Abbreviation	Explanations
WWAN	Wireless Wide Area Network
CSD	Circuit Switched Data
DCE	Data Circuit Terminating Equipment
DTE	Data Terminal Equipment
GPRS	General Packet Radio Service
GSM	Global System for Mobile Communication
ME	Mobile Equipment
MO	Mobile Originated
MS	Mobile Station
NAS	Non-Access Stratum
PDU	Protocol Data Unit
RF	Radio Frequency
SIM	Subscriber Identity Module
SMS	Short Message Service
TA	Terminal Adapter
TE	Terminal Equipment
TS	Telecom Services
VIL	Voltage Input Low
VIH	Voltage Input High

Table 1: Abbreviations

1.8 Revision history

Revision	Date	Changes
1.0	29.08.2024	Initial version
1.1	17.12.2024	Added chapter "Reboot the modem"

Table 2: Documentation change log

2 Product description

2.1 Overview

The pictures below show the mechanical design of the NT910 G1 terminal along with the positions of the different connectors and mounting holes. The NT910 G1 terminal case is made of durable PC/ABS plastic.

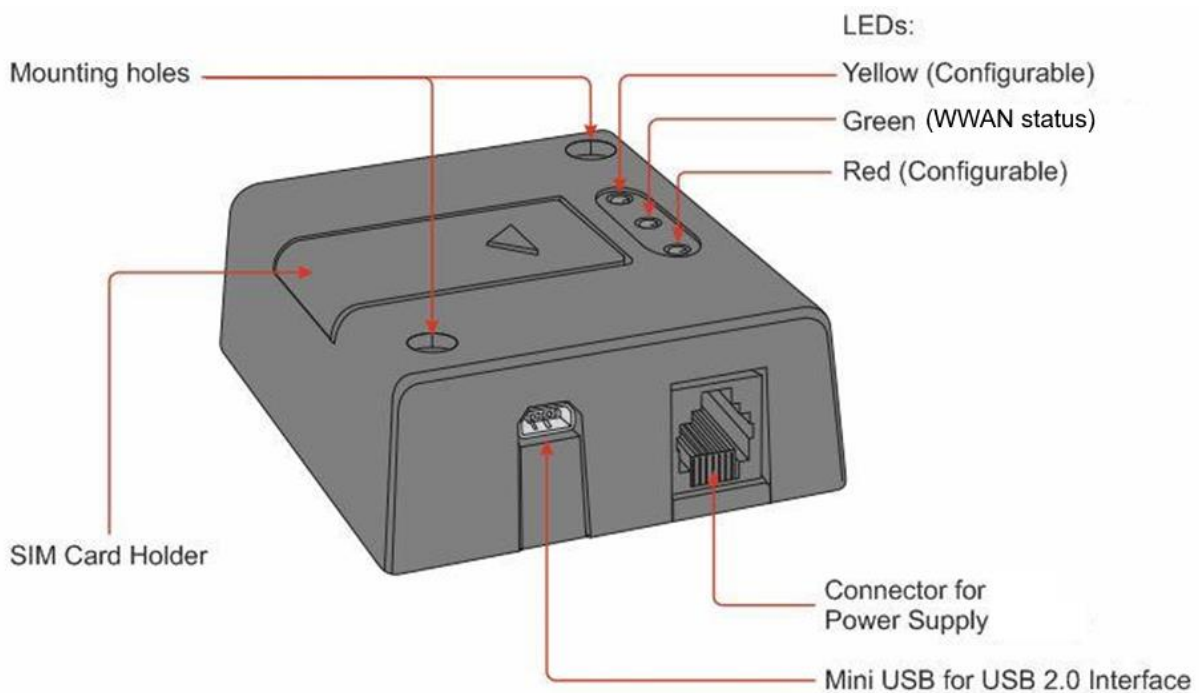


Figure 1: Connectors on rear side

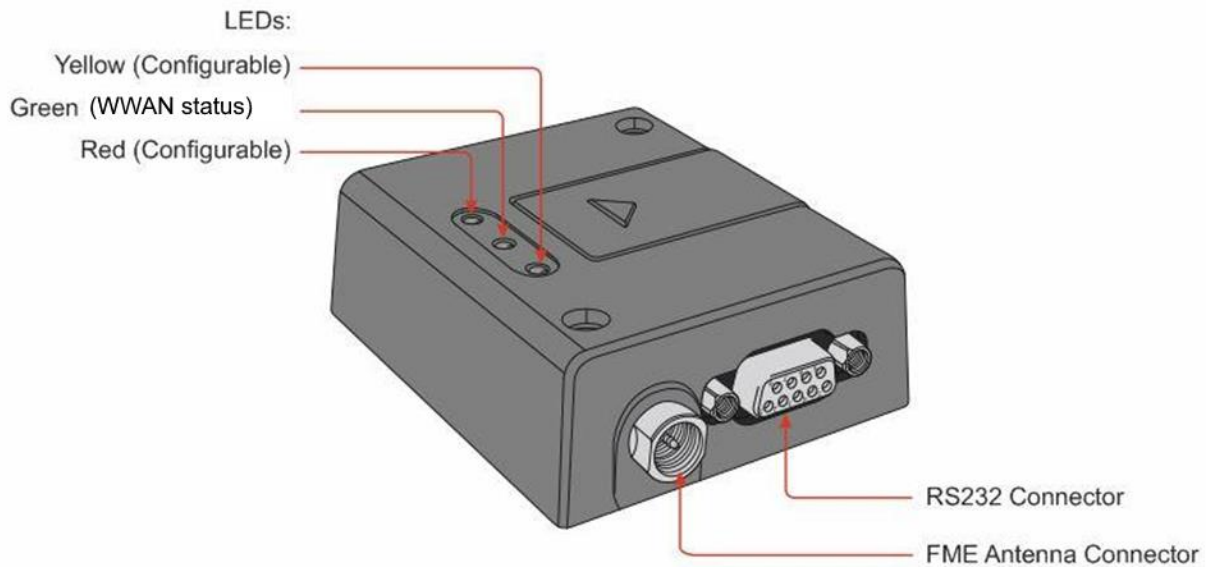


Figure 2: Connectors on front side

PLEASE NOTE THE FOLLOWING:

The terminal can be securely fitted into your application by using the mounting holes positioned at the two corners of the device.

The SIM card can be inserted into the modem without the need for any tools.


Section 4 Electrical Description "2. Electrical Description" describes the pins and electrical characteristics of the modem's terminal's various connectors are described in Section 4.2 Antenna Connector "2.3 Antenna Connector" provides information about the antenna connector is found in "2.3 Antenna Connector".



Special DIN Rail Mounting Brackets (Art-nr. 12304) is available as an accessory item which allows installation of the modem in industrial environments using DIN Rails. For more details of our accessories please check chapter 2.5 Telic Certified Accessories.

2.2 Identification

On the bottom of the device, you will find the type label.

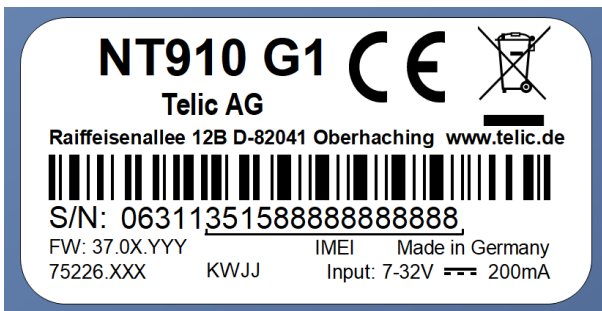

Label	Description
S/N	Serial number ¹
	Serial number barcode
IMEI	International Mobile Equipment Identity
FW	Firmware version
CE	CE Verification mark
	Disposal in accordance with European Directive 2002/96/CE

2.3 Physical dimensions and weight

Overall dimensions: 77 x 66 x 26 mm

Weight: 90 g

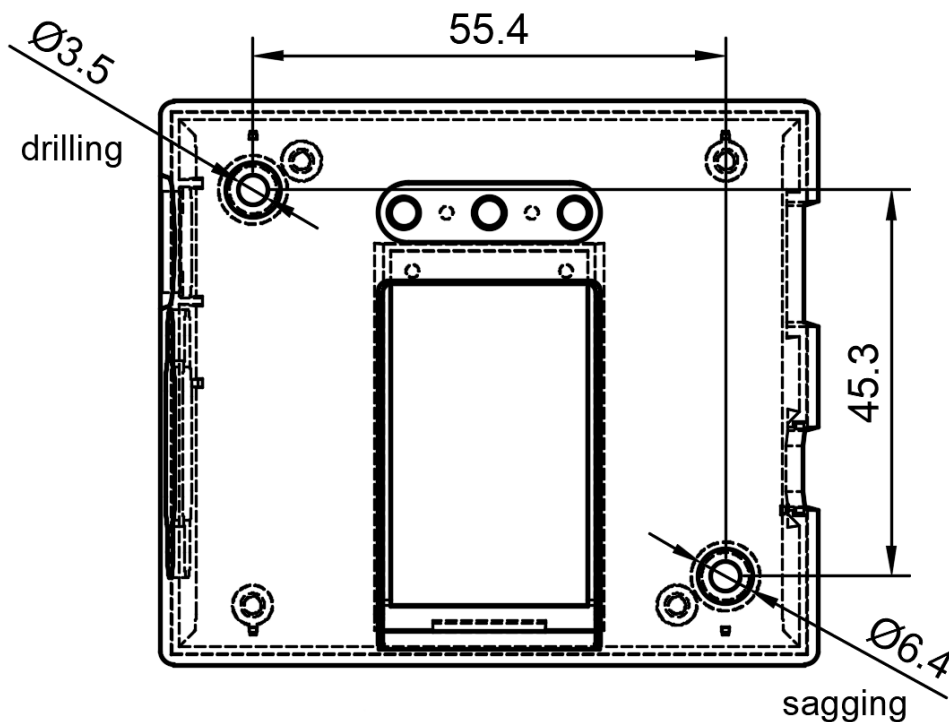


Figure 3: Illustration of the exterior casing

¹ Note that the serial number consists of a 4-digit or 5-digit product ID followed by the device's IMEI.

2.4 Product features and technical data

NOTICE

Telic AG may, at any time and without notice, make changes or improvements to the products and services offered and / or cease producing or commercializing them.

NOTICE – Optional Features

Features identified as “Optional” in this document are not assembled by default. Please contact our Sales Team at <http://www.telic.de/en/contact-us> to clarify the details of ordering terminal variants.

Category	Features	Details
Air Interface	LTE frequency bands	B1, B2, B3, B4, B5, B8, B12, B13, B18, B19, B20, B25, B26, B27, B28, B66, B71, B85
	GSM frequency bands	B2, B3, B5, B8
	GPRS Class	Class 4
	Output Power	LTE: 23 dBm (Power Class 3) GSM/GPRS: 33 dBm (Power Class 4)
	SMS	SMS over NAS
Hardware Features	SIM Card Holder	1x (1,8 Volt)
	LEDs	1x WWAN status + 2 configurable
	Type Approvals	CE, WEEE, RoHS and REACH compliant
Connectors	D-Sub (9-pin)	1x Female (RS232)
	USB	1x Mini-USB
	RJ11	For details have a look at section "Power Connector"
Interfaces / Connectors	Antenna	1x (FME Male)
	RS232	1x (Sub-D9 Female)
	USB 2.0	1x Mini-USB
	Analog Inputs	1x (RJ11 connector, optional)
	Outputs	1x (RJ11 connector, optional)
Software	AT Command Set	According to 3GPP TS 27.005, 27.007 and customized Telit AT commands
	Programming Language	Telit IoT AppZone
	SIM Application Toolkit	3GPP 51.01
	TCP/IP Stack	IPv4/IPv6 stack with TCP and UDP protocol
	SW Update	Serial / USB / FOTA
Power Management	Voltage Range	7V - 32V


Hardware Characteristics	Operating Temperature	-30°C to +75°C  It is not recommended to operate the terminal permanently on full load at maximum temperature. To monitor the temperature please use the AT command AT#TEMPMON
	Dimensions	77 x 66 x 26 mm
	Weight	90 g

Table 3: Feature overview

2.5 Telic certified accessories

NOTICE

The pentaband antennas listed in this section are suitable both for use with GSM and LTE networks. Please check, though, which frequency bands your mobile network service provider supports specifically for LTE Cat-1. Eventually, you might need to purchase a dedicated antenna to cover the 2600 MHz band. Please contact us if you require specific recommendations on suitable antennas to use.

DIN Rail Mounting Bracket Rectangular		DIN Rail adapter (rectangular)	12304
Terminal Power Supply		Power supply 6pin Mini Western-Plug, Input 100- 240V AC Output 12V DC,1,25A Length: 1500±50mm	12007
Terminal Power Cable		Power cable Length: 1500 ± 30	12003
RS232 Cable		RS232 cable, 9-pin Sub-D-connector, male/female Length: 2m	12004
Mini USB with open ends		USB cable for terminals: - for I/O Connection Length: 600±20mm	12301

Product	Picture	Description	Part number
Magnetic antenna LTE		FME female connector 3m Frequencies: 698-960 MHz, 1710-2170 MHz, 2500-2700 MHz Dimensions: 31 x 72 mm	74672
Rectangular antenna LTE		FME female connector Frequencies: 824~894/1710~2690MHz Dimensions: 9 x 61 mm	74673
Stub antenna LTE		FME-female connector Frequencies: 824~894/1710~2690MHz Dimensions: 18 x 55,5 mm	74705
Roof antenna LTE		FME-female connector, 2,5m Frequencies: 689-960 MHz, 1710-2170 MHz, 2500-2700 MHz Dimensions: 80 x 74x 14,7 mm	12043

Table 4: Accessories list

Please contact your distributor or Telic AG for availability or check Telic's webpage <http://www.telic.de>.

3 Safety and product care

This device has been designed in accordance with industrial standards, manufactured with utmost care using high-quality materials, and thoroughly tested. Nevertheless, its use may constitute a risk to persons or cause material damage.

The following safety instructions must be followed to ensure the safety of users and of the device.

NOTICE

If these instructions are ignored, Telic AG will not assume responsibility for any damages that are incurred. Telic AG may refuse warranty claims where evidence of product misuse is found.

Please read the information in this section and the information in Section 6 Installation of the modem before starting your integration work!

3.1 Audience and intended use

This terminal product is targeted towards system integrators who need to add a wireless communications link to their M2M / IoT application to capture data from the application as well as to remotely control that application. Any other use is not intended.

3.2 Safety instructions

PLEASE READ THESE SAFETY INSTRUCTIONS AND KEEP A COPY OF THEM.

The NT910 G1 terminal contains highly integrated components which can be damaged by electrostatic discharge if the user would open the housing.



Therefore, only touch the NT910 G1 on the housing or connectors and avoid touching the components on the board.

Always ensure that the use of the modem is permitted. The modem may present a hazard if used in the proximity of personal medical electronic devices. As a rule, the modem must not be used in hospitals, airports or planes.

Never use the modem at a gas station, refueling point, blasting area or in any other environment where explosives may be present.

Operating the modem close to other electronic devices, such as antennas, television sets, and radios may cause electromagnetic interference.

This product is intended to be used with the antenna or other radiating element at least 20 cm away from any part of the human body. In applications where this rule cannot be applied, the

application designer is responsible for providing the SAR measurement test report and declaration.

You are responsible for observing your country's safety standards, and where applicable, the relevant wiring rules.

Warning



When using products which are exposed to electric voltage the valid regulations must be observed.

Always make sure that the device is disconnected from the power supply before opening it. You should only use tools on components, modules or devices if they are disconnected from the power supply and the electric charge, which may still be stored in some components inside the device, has been discharged.

All cables and wires which are energized and connected to the device, the module or components must be checked regularly for any damage of the isolation shield or fractures of the cables. If the supply cables are visibly damaged the device must be taken out of operation immediately until the faulty cable has been replaced.

When using components or modules, the specification given in the corresponding description of these components must strictly be observed. The device shall be operated only by appropriately qualified personnel.

This device shall only be used for its intended purpose.

Please note that we are not responsible for any errors in usage of wireless connections.

Therefore, we cannot accept any responsibility for consequential loss.

In case measurements with the opened housing are necessary, an isolating-transformer must be integrated for safety reasons. Alternatively, the voltage can be supplied by an appropriate power supply which complies with the safety regulations. All wiring work must be done in a voltage free state only.

3.3 General precautions

The NT910 G1 terminal as a stand-alone item is designed for indoor use only. To use outside it must be integrated into a weatherproof enclosure. Do not exceed the environmental and electrical limits as specified in Section 2.4 Product Features and Technical Data.

Avoid exposing the modem to lighted cigarettes, naked flames or to extreme hot or cold temperatures.

Never try to dismantle the modem yourself. There are no components inside the modem that can be serviced by the user. If you attempt to dismantle the modem, you will invalidate the warranty.

The NT910 G1 terminal must not be installed or located where the surface temperature of the plastic case may exceed 75°C.

All cables connected to the NT910 G1 terminal must be secured or clamped, immediately adjacent to the modem's connectors, to provide strain relief and to avoid transmitting excessive vibration to the modem in the installation.

Ensure the cables, supplying power, and input cable to the NT910 G1 terminal do not exceed 3 meters.

To protect power supply cables and meet the fire safety requirements when the unit is powered from a battery or a high current supply, connect a fast 1.25A fuse in line with the positive supply. Do not connect any incompatible component or product to the NT910 G1 terminal.

3.4 SIM card precautions

Before handling the SIM card in your application, ensure that you are not charged with static electricity. Use proper precautions to avoid electrostatic discharges.

When the SIM card hatch is opened, the SIM card connectors lie exposed under the SIM card holder.



Caution! Do not touch these connectors! If you do, you may release an electrical discharge that could damage the modem or the SIM card.

When designing your application, the SIM card's accessibility should be considered. We always recommend that you have the SIM card protected by a PIN code. This will ensure that the SIM card cannot be used by an unauthorized person.

3.5 Antenna precautions

Consider the risk of lightning in case the antenna is to be mounted outside. Follow the instructions provided by the antenna manufacturer.

NOTICE

Please note that this LTE device is designed for use with one single antenna only. It does not support antenna diversity.

Never connect more than one modem to a single antenna. The modem can be damaged by radio frequency energy from the transmitter of another modem.

Like any mobile station, the antenna of the modem emits radio frequency energy. To avoid EMI (electromagnetic interference), you must determine whether the application itself, or equipment in the application's proximity, needs further protection against radio emission and the disturbances it might cause. Protection is secured either by shielding the surrounding electronics or by moving the antenna away from the electronics and the external signals cable.

The modem and antenna may be damaged if either come into contact with ground potentials other than the one in your application. Beware, ground potential is not always what it appears to be.

3.6 Storage conditions

It is recommended to store the unit within a temperature range from +15°C to +35°C and a relative humidity of max. 60% without condensation.

4 Electrical description

The modem uses the following standard connectors:

- RJ11 6-way (power + 1 optional analogue input + 1 optional output)
- Mini USB (data) - Also the power connector for the USB powered variant (optional)
- SIM card reader
- FME male coaxial jack (antenna connector)
- Sub-D female socket, 9-pin (RS232 serial port)

4.1 Power connector

An RJ11 6-way connector, as shown and described below, serves as a means of supplying and controlling DC power to the modem. The use of an external power supply is necessary as the USB port is not intended to be used as power source.

The supply voltage VCC required by the modem is 7V - 32V DC. Please note that applying the supply voltage does not switch the modem on.

Please see chapter 5.1 Switch ON the modem for further important details about TO_IN and power supply requirements.



VCC and GND are reverse polarity and overvoltage protected if the antenna interface and the user's application are not used or connected to separate grounds.

Excessive reverse voltage or overvoltage can destroy the device.

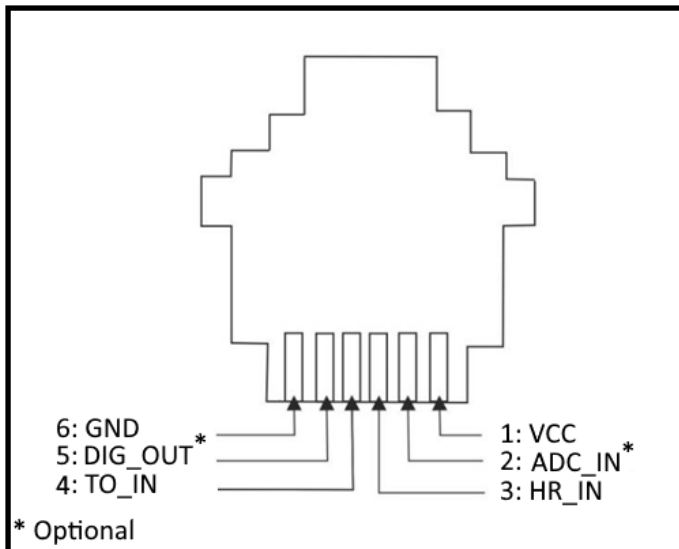


Figure 4: RJ11 pin connector

Pin	Signal	Direction	Limits	Description
1	VCC	Input	7 – 32V	Positive power input, DC
2	ADC_IN	Input	0 – 32V	(Optional) Analogue Input
3	HR_IN	Input	7 – 32V	Positive edge triggered signal to switch off modem. Use only after modem AT interface is available and PWRMON is HIGH. VIH > 5V, VIL < 0.5V Power off: t > 3s The maximum time to shut down the device is 25 seconds.
4	TO_IN	Input	7 – 32V	Positive edge triggered signal; used to switch on the modem. VIL < 0.5V; VIH > 7V 1. Power on pulse: t > 1s and t < 5s with VCC applied. 2. Continuous power to VCC and TO_IN Provide continuous power to VCC. Provide continuous power TO_IN. VIL = Voltage Input low VIH = Voltage Input high
5	DIG_OUT	Output	7 – VCC	(Optional) Digital Output VCC, max. 400 mA
6	GND	Input	-	Negative power (ground) input and return path for TO_IN and HR_IN.

Table 5: RJ11 pin and signals description

4.2 SIM card reader

The terminal is fitted with a SIM card reader designed for 1.8V SIM cards. It is the flip-up type which is lockable in the horizontal position and is accessed through a removable panel.

4.3 RS232 serial port

The modem supports a standard RS232 serial interface via its 9 pin D-sub connector, shown below. In line with serial communication terminology the terminal should be considered as the data circuit terminating equipment (DCE) and the external application or computer as the data terminating equipment (DTE). The maximum data rate to communicate with the NT910-G1 is 921600 bit per second.

The default data rate is 115200 bps.

Pin	Signal	Direction	Limits	Description
1	DCD	Output	> + 4V <- 4 V	Data carrier detect
2	RD	Output	> + 4V <- 4 V	Received data
3	TD	Input	> + 2,4V < 0.8 V	Transmitted data
4	DTR	Input	> + 4V < 0.8 V	Data terminal ready
5	GND	-	0 V	Ground connection
6	DSR	Output	> + 4V < - 4 V	Data set ready
7	RTS	Input	> + 2,4V < 0.8 V	Request to send
8	CTS	Output	> + 4V < - 4 V	Clear to send
9	RI	Output	> + 4V < - 4 V	Ring indicator

Table 6: Electrical characteristics of the serial port signals

4.4 Mini USB connector

Figure 5 gives an overview about the pin assignment of the mini-USB connector.

The modem supports a standard USB 2.0 full speed slave interface to receive AT-commands as well as data transmissions.

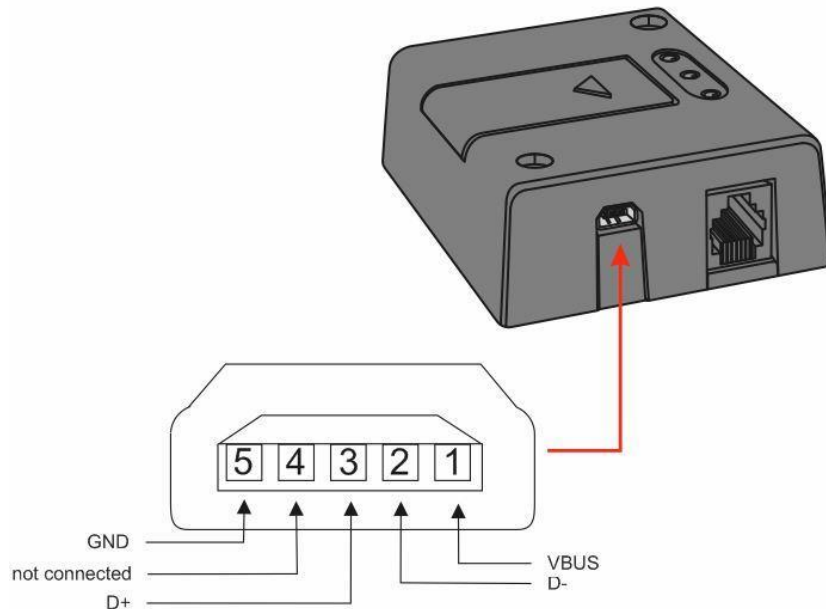


Figure 5: Mini USB type B connector

5 Operation

5.1 Switch ON the modem

NOTICE

To ensure correct operation of the terminal, please ensure that a SIM card has been inserted into the terminal prior to switching it on.

Do not insert a SIM card into the device while it is switched on. If you find out that the device is switched on but missing a SIM card, first switch off the modem and then insert the SIM card. Note that the device does not have a SIM card detect feature.

To switch on the modem, you have two options:

Method 1: Continuous Power to VCC and TO_IN

Provide continuous power to VCC.

Provide continuous power TO_IN (pin 4).

Method 2: Timed Power to TO_IN

Provide continuous power to VCC.


Provide timed power to TO_IN.

Supply power to TO_IN for at least 1 second but no more than 5 seconds.

After the duration of 1 to 5 seconds, remove the power from TO_IN.

The terminal will power on after this timed power input and will remain operational even after power to TO_IN is removed.

The modem is fully operational after 20 seconds. Connection to a network may take longer depending on coverage and reception conditions and is outside the scope of the terminal.

	<p>Note: The TO_IN signal requires a positive edge to turn the modem on. This transition should be a rising signal from < 0.5V to > 7V and must be applied at the same time as VCC or after it. Ensure that the high level is maintained for a period as specified in the chosen method.</p>
	<p>Very slow transitions (significantly slower than many milliseconds) or very small transitions (e.g., only few volts instead of 0V to VCC) will not turn on the module (since they are not considered to be a “positive edge”).</p>

Although this will not be an issue in almost all typical applications of the modem, there are a few cases in which the modem might not recognize the power up signal. This is no failure of the modem itself, the same would apply to almost any electronic device that provides a separate “power on” or “reset” signal.

Possible cases are the following:

- Large capacitors in your power supply which will lead to slow leading and falling edges (issue does not apply with modern stabilized switching regulator power-adaptors) AND TO_IN tied in parallel to VCC (instead of separate dedicated digital signal)
- Slow analogue signals used to assert TO_IN
- TO_IN signal not before VCC

If you are in doubt, please:

- Use the mains power adapter that is provided by your distributor and is known to work properly with your modem.
- Make sure that your signal and system design is according to the above.

5.2 Configuration of the bit rate on the serial interface

The module used in the terminal does not support auto-bauding.

The default data rate is 115200 baud with 8 data bits, 1 stop bit, and no parity.

Other rates are programmable.

5.3 AT Command syntax and response format

1. AT command syntax:

- Each AT command is followed by a line ending character, the default is

Carriage Return <CR> (hexadecimal: 0D). This setting can be changed with the AT\$3 command.

2. Communication direction:

Example of AT Command Communication:

Command/Response	Hexadecimal	Notes
AT<CR>	41 54 0D	Data sent to the modem
AT<CR> <CR><LF> OK<CR><LF>	41 54 0D 0D 0A 4F 4B 0D 0A	Answer received from the modem

Legend:

<CR> = Carriage Return (hexadecimal: 0D)

<LF> = Line Feed (hexadecimal: 0A)

5.4 Power off the modem

Warning



Powering OFF the module should be done gracefully allowing the module to complete all ongoing and pending tasks while properly handling all memory buffers.

Don't interrupt this process by disconnecting the power source too early.

This prevents device damage and consequently avoids voiding the warranty.

It normally takes more than 15 seconds to de-attach from the network and close the internal filesystem properly.

There are three ways to switch off (power down) the modem as described below:

- Power down command, most preferred way:
AT command: AT#SHDN
The maximum time to shut down the device with this command completely is 25 seconds.
- Fast power down:
In the event of an unwanted power supply loss, the device can be switched off without any risk of filesystem data corruption by implementing fast power down feature. The fast power down feature permits to reduce the current consumption and the time to power off to minimum values.

AT command: AT#FASTSHDN

- In the event of an unexpected power supply loss, the device can be powered down without the risk of filesystem data corruption by implementing the fast power down feature. If the voltage on VCC drops below 5V, the fast shutdown feature will be automatically triggered.

IMPORTANT: The AT#FASTSHDN command must be issued before any power loss occurs. Enable the fast shutdown feature on GPIO 5 with the following command:
AT#FASTSHDN=1,5

To check if fast shutdown is correctly configured use the command:

AT#FASTSHDN?

The answer should be:

#FASTSHDN: 1,5

OK

Warning

It is highly recommended to regularly verify that the fast shutdown feature is correctly configured to avoid any potential filesystem data corruption in the event of an unexpected power loss. Use the command `AT#FASTSHDN?` to check the current configuration. The expected response should be:



#FASTSHDN: 1,5
OK

If the configuration is not as expected, re-enable the fast shutdown feature using the command

```
AT#FASTSHDN=1,5
```

5.5 Reboot the modem

This chapter describes the behavior of the modem when reboot commands are used and explains the available methods to restart the device.

REBOOT COMMANDS

The modem supports the following commands to initiate a reboot.

1. `AT#ENHRST=1,0` (recommended command)
2. `AT#REBOOT` (deprecated command)

Both commands trigger the modem to shut down. However, the device does not automatically start on its own. You must use one of the following methods:

1. Using the Serial Port (DTR line HIGH)

To ensure the modem restarts correctly after a shutdown:

- Connect the device via the serial port.
- Ensure the Data Terminal Ready (DTR) line is set to HIGH before sending the reboot command.

The device will restart once the AT command is processed.

2. Performing a Power Cycle

Alternatively, you can perform a power cycle to restart the modem after you have sent one of the AT commands:

- Disconnect the device from the power source.
- Reconnect the power source after a brief pause.

This will initiate a full restart of the device.

5.6 Using low power mode of the modem

5.4.1 ENABLING THE LOW POWER MODE

- Wait until the WWAN module is logged onto the network
- Send the AT command "AT#SLED=0" for disabling the status LED
- There are different low power modes available, for the details please consult the AT Commands Reference Guide and have a look at "AT+CFUN - Set Phone Functionality".

One possible low power mode is AT+CFUN=0.

This puts the module in NON-CYCLIC SLEEP mode, minimum functionality:

The AT interface is not accessible by UART. Consequently, once you have set CFUN=0, don't send further characters. Otherwise, these characters remain in the input buffer and may cause the output of unsolicited result code.

To get minimum power consumption it is possible to disable the RS232 level shifter.

This is done when you set DTR to 0.

5.4.2 DISABLING THE LOW POWER MODE BY USER

The first wake-up event, or toggling RTS line, stops power saving and takes the module back to full functionality level CFUN=1.

The RS232 transceiver is activated immediately.

5.7 Operating states / green LED

The modem has a green power up LED, as depicted below, which is used to indicate various operating states. These states are described in following table.

Default settings:

- Set alternate GPIO function: AT#GPIO=1,0,2
- Set alternate Timings: AT#SLED=4
- Safe configuration: AT#SLEDSAV

AT#SLED=4 Operating state of ME910G1-WW module	green LED state
Device off	Permanently off
Net search / not registered	Fast blinking (0.5s ON and 0.5s OFF)
Registered full service	Slow blinking (300ms ON and 2.7ms OFF)
Low power mode activated	Permanently off

Table 7: Operating states of the green LED

5.8 Status LEDs (one yellow, one red)

The red and yellow Status LEDs are under control of GPIO1 and GPIO2 of the ME910G1-WW module inside the terminal. They can be controlled via AT commands. The default status of these two LEDs is off. The following commands must be used to initialize and to configure the GPIOs to control the two LEDs:

Switching on red LED	AT#GPIO=2,1,1
Switching off red LED	AT#GPIO=2,0,1
Switching on yellow LED	AT#GPIO=3,1,1
Switching off yellow LED	AT#GPIO=3,0,1

These LEDs can be controlled e.g., by an external microcontroller via AT commands issued to the terminal via the RS232 interface. They can be used to signal any useful status of the external application such as:

- error indication
- status of communication (LTE, GPRS, SMS, CSD, etc.)
- status of network (to simulate network LED)
- quality of service

5.9 Current consumption measurements

The following table shows you the power consumption of the terminal in different modes.

Status	[mA]@7V	[mA]@12V	[mA]@24V	[mA]@32V
off (DTR low, no TO-IN)	0.25	0.39	0.79	1.05
Idle Mode, Standby, 2G - registered (AT+CFUN=1, DTR is indifferent)	15.5	9.9	7.2	6.6
Idle Mode, Standby, 2G - registered (AT+CFUN=5, DTR low)	1.8	1.7	1.6	1.7
Connected, 2G, transmitting at maximum power, using two transmission slots	465	216	115	93

Table 8: Power consumption

5.10 Additional configuration

5.8.1 ACTIVATING / DEACTIVATING LTE MODE

The terminal is configured by default with LTE / 2G mode activated (AT+WS46=30).

The following commands can be used to modify the usage of mobile network technologies:

What do you want to do	Send the AT command	Device Response
Check the current setting	AT+WS46?	
2G Only mode is activated		+WS46: 12
LTE Only mode is activated		+WS46: 28
LTE / 2G mode is activated		+WS46: 30
Activate 2G Only Mode	AT+WS46=12	
Activate 2G / LTE mode	AT+WS46=30	
Activate LTE Only Mode	AT+WS46=28	

5.8.3 CONFIGURING SPECIFIC FREQUENCY BAND

In case you are using an antenna which does not cover all frequencies specified in Section 4.2, you may configure a specific frequency band to be used with the AT command AT#BND.

6 Installation of the modem

This chapter gives you advice and helpful hints on how to integrate the NT910 G1 terminal into your application from a hardware perspective. Please read the information given in Section 2 Product Description and then read the information in this section before starting your integration work.

6.1 Where to install the modem

There are several conditions which need to be taken into consideration when designing your application as they might affect the modem and its function. They are:

6.1.1 ENVIRONMENTAL CONDITIONS

The modem must be installed so that the environmental conditions stated in Section 2.4 Product Features and Technical Data, such as temperature, humidity and vibration are satisfied. Additionally, the electrical specifications in Section 2.4 Product Features and Technical Data must not be exceeded.

6.1.2 WWAN SIGNAL STRENGTH

The modem must be placed to ensure sufficient WWAN coverage. To improve signal strength, the antenna can be moved to a different position. Signal strength depends on how close the modem is to a radio base station. You must ensure that the location at which you intend to use the modem is within the network coverage area. Degradation in signal strength can be the result of a disturbance from another source, for example an electronic device in the immediate vicinity. To verify the current signal strength, issue the command AT+CSQ.



Before installing the modem, use an ordinary mobile telephone to check a possible location for it. In determining the location for the modem and antenna, you should consider signal strength as well as cable length.

6.1.3 CONNECTION OF COMPONENTS TO THE NT910 G1 TERMINAL

The integrator is responsible for the final integrated system. Incorrectly designed or installed external components may cause radiation limits to be exceeded. For instance, improperly made connections or improperly installed antennas can disturb the network and lead to malfunctions in the modem or equipment.

6.1.4 NETWORK AND SUBSCRIPTION

Before your application is used, you must ensure that your chosen network provides the necessary telecommunication services. Contact your service provider to obtain the necessary information.

If you intend to use SMS in the application, ensure this is included in your (voice) subscription. Consider the choice of the supplementary services

6.2 How to install the modem

6.2.1 POWER SUPPLY

Use a high-quality power supply cable with low resistance. This ensures that the voltages at the connector pins are within the allowed range, even during the maximum peak current.

When the unit is powered from a battery or a high current supply, connect a fast 1.25A fuse in line with the positive supply. This protects the power cabling and modem.

6.2.2 SECURING THE MODEM

Before securing the modem consider the amount of additional space required for the mating connectors and cables that will be used in the application.

Where access is restricted, it may be easier to connect all the cables to the modem prior to securing it in the application.

Securely attach the NT910 G1 terminal modem to the host application using two 3 mm diameter pan-head screws.

6.3 Antenna

6.3.1 GENERAL

The antenna is the component in your system that maintains the radio link between the network and the modem. Since the antenna transmits and receives electromagnetic energy, its efficient function will depend on:

the type of antenna (for example, circular or directional)

the placement of the antenna

Communication disturbances in the vicinity of the antenna.

The following sections address issues concerning antenna type, antenna placement, antenna cable, and possible communication disturbances. In any event, you should contact your antenna manufacturer for additional information concerning antenna type, cables, connectors, antenna placement, and the surrounding area.

You should also determine whether the antenna needs to be grounded or not. Your antenna manufacturer might be able to design a special antenna suitable for the application.

6.3.2 ANTENNA TYPE

Make sure that the selected antenna meets the requirements specified in Section 4.2 ("Antenna Connector").

6.3.3 ANTENNA PLACEMENT

The antenna should be placed away from electronic devices or other antennas. The recommended minimum distance between adjacent antennas, operating in a similar radio frequency band, is at least 50cm. If signal strength is weak, it is useful to face a directional antenna at the closest radio base station. This can increase the strength of the signal received by the modem. The modem's peak output power can reach 2W. RF field strength varies with antenna type and distance. At 10cm from the antenna the field strength may be up to 70V/m and at 1m it will have reduced to 7V/m. In general, CE-marked products for residential and commercial areas, and light industry can withstand a minimum of 3V/m.

6.3.4 THE ANTENNA CABLE

Use 50Ω impedance low-loss cable and high-quality 50Ω impedance connectors (frequency range up to 2GHz) to avoid RF losses. Ensure that the antenna cable is as short as possible. The Voltage Standing-Wave Ratio (VSWR) may depend on the effectiveness of the antenna, cable and connectors. In addition, if you use an adapter between the antenna cable and the antenna connector, it is crucial that the antenna cable is a high-quality, low-loss cable. Minimize the use of extension cables, connectors and adapters. Each additional cable, connector or adapter causes a loss of signal power.

6.3.5 POSSIBLE COMMUNICATIONS DISTURBANCES

Possible communication disturbances include the following:

- **Noise** can be caused by electronic devices and radio transmitters.
- **Pathloss** occurs as the strength of the received signal steadily decreases in proportion to the distance from the transmitter.
- **Shadowing** is a form of environmental attenuation of radio signals caused by hills, buildings, trees or even vehicles. This can be a particular problem inside buildings, especially if the walls are thick and reinforced.
- **Multi path fading** is a sudden decrease or increase in the signal strength. This is the result of interference caused when direct and reflected signals reach the antenna simultaneously. Surfaces such as buildings, streets, vehicles, etc., can reflect signals.
- **Handover** occurs as you move from one cell to another in the WWAN network. Your mobile application call is transferred from one cell to the next. handover can briefly interfere with communication and may cause a delay, or at worst, a disruption.