



Solutions Start Here



## NT910G User Manual

31.01.2020

Release 1.0

# Contents

<b>1</b>	<b>General Terms and Conditions .....</b>	<b>3</b>
1.1	General Information .....	3
1.2	Contact for Support.....	3
1.3	Conventions used in this Manual.....	4
1.4	Related Documentation .....	4
1.5	Abbreviations .....	4
1.6	Revision History.....	5
<b>2</b>	<b>Product Description .....</b>	<b>5</b>
2.1	Overview .....	5
	Please note the following:.....	6
2.2	Identification.....	7
2.3	Physical Dimensions and Weight .....	7
2.4	Product Features and Technical Data .....	8
2.5	Telic Certified Accessories.....	9
<b>3</b>	<b>Safety and Product Care.....</b>	<b>11</b>
3.1	Audience and Intended Use.....	12
3.2	Safety instructions .....	12
3.3	General precautions .....	13
3.4	SIM card precautions .....	14
3.5	Antenna precautions.....	14
3.6	Storage Conditions .....	14
<b>4</b>	<b>Electrical Description .....</b>	<b>15</b>
4.1	Power Connector .....	15
4.2	Antenna Connector.....	16
4.3	SIM card reader .....	17
4.4	RS232 Serial Port .....	17
	4.4.1 Serial Data.....	17
4.5	Mini USB Connector .....	18
<b>5</b>	<b>Operation .....</b>	<b>18</b>
5.1	Switch ON the modem.....	18
5.2	Configuration of the bit rate on the serial interface.....	19
5.3	Power cycle the modem .....	19
5.4	Using low power mode of the modem.....	20
	5.4.1 Enabling the low power mode .....	20
	5.4.2 Disabling the low power mode by user .....	21
	5.4.3 Disabling the low power mode upon receiving GSM activity .....	21
5.5	Operating states / green LED .....	21
5.6	Status LEDs (one yellow, one red).....	22
5.7	Current consumption Measurements.....	22

5.8	Additional Software Configuration.....	23
5.8.1	Activating / Deactivating LTE Mode.....	23
5.8.3	Configuring specific frequency band.....	23
6	Installation of the modem.....	23
6.1	Where to install the modem.....	23
6.1.1	Environmental conditions.....	23
6.1.2	GSM Signal strength.....	24
6.1.3	Connection of components to the NT910 G Terminal.....	24
6.1.4	Network and Subscription.....	24
6.2	How to install the modem.....	24
6.2.1	Power supply.....	24
6.2.2	Securing the modem.....	24
6.3	Antenna.....	25
6.3.1	General.....	25
6.3.2	Antenna type.....	25
6.3.3	Antenna placement.....	25
6.3.4	The antenna cable.....	25
6.3.5	Possible communications disturbances.....	26

# 1 General Terms and Conditions

This technical description contains important information for the installation and use of the NT910G Terminal. Read it carefully before you start working with the NT910G Terminal.

We cannot be held responsible for material loss or personal injury that is due to non-compliance with the safety instructions. The warranty will be void in such circumstances.

Telic reserves the right to change the included information without prior notice and does not take responsibility for errors in the document and/or for any missing information.

## 1.1 General Information

This Installation Manual consists of the following chapters:

Chapter	Description
1	General Information provides basic information such as the conventions for the warning levels, applicable related documentations, used abbreviations, a revision history and contact information.
2	Product Description provides a brief overview about the mechanical specification of the product (including size and weight) as well as an overview of the functions and features of the device as well as the available accessories.
3	Safety and Product Care addresses the audience for this manual, the intended use of this device and safety-related information important to read before using the device.
4	Electrical Description describes the electrical characteristics and pin allocation of the device's connectors.
5	Operation provides details relating to the commissioning of the device, including details on activating special features such as the low power mode.
6	Installation of the modem provides important instructions about how to install the device for the M2M application.

## 1.2 Contact for Support

Please submit your request to TELIC AG customer support using the following online form:

<https://www.telic.de/en/contacts/support-request>

Information about Telic AG, products and accessories, including FAQs, are available from the following web site: <http://www.telic.de>.

## 1.3 Conventions used in this Manual

The following conventions for warning levels are used in this manual:

### Warning



Warnings against hazards that may result directly in **serious injuries or death** in case of non-observance.

### Caution



Warnings against hazards that may result in **injuries** in case of non-observance.

### NOTICE

Warnings against hazards that may result in **material damage** in case of non-observance.



Indicates that the device can be damaged by electrostatic discharge.



This note contains helpful suggestions or references to material not covered in the document.

## 1.4 Related Documentation

Please consult the download zone of the Telic AG website for additional documents related to LT910 E, such as AT command manuals. Note that such type of documents can be accessed online only after you have registered on our website and agreed with our terms of use. Please follow this link to register for a user account:

<http://www.telic.de/en/nda-reg-form>

Use the following link to login if you already have a valid user account:

<http://www.telic.de/en/en-login>

## 1.5 Abbreviations

Abbreviation	Explanations
CSD	Circuit Switched Data
DCE	Data Circuit Terminating Equipment
DTE	Data Terminal Equipment

GPRS	General Packet Radio Service
GSM	Global System for Mobile Communication
ME	Mobile Equipment
MO	Mobile Originated
MS	Mobile Station
PDU	Protocol Data Unit
RF	Radio Frequency
SIM	Subscriber Identity Module
SMS	Short Message Service
TA	Terminal Adapter
TE	Terminal Equipment
TS	Telecom Services

Table 1: Abbreviation

## 1.6 Revision History

Revision	Date	Changes
1.0	31.01.2020	Initial version

Table 2: Documentation Change Log

# 2 Product Description

## 2.1 Overview

The pictures below show the mechanical design of the NT910G Terminal along with the positions of the different connectors and mounting holes. The NT910G Terminal case is made of durable PC/ABS plastic.

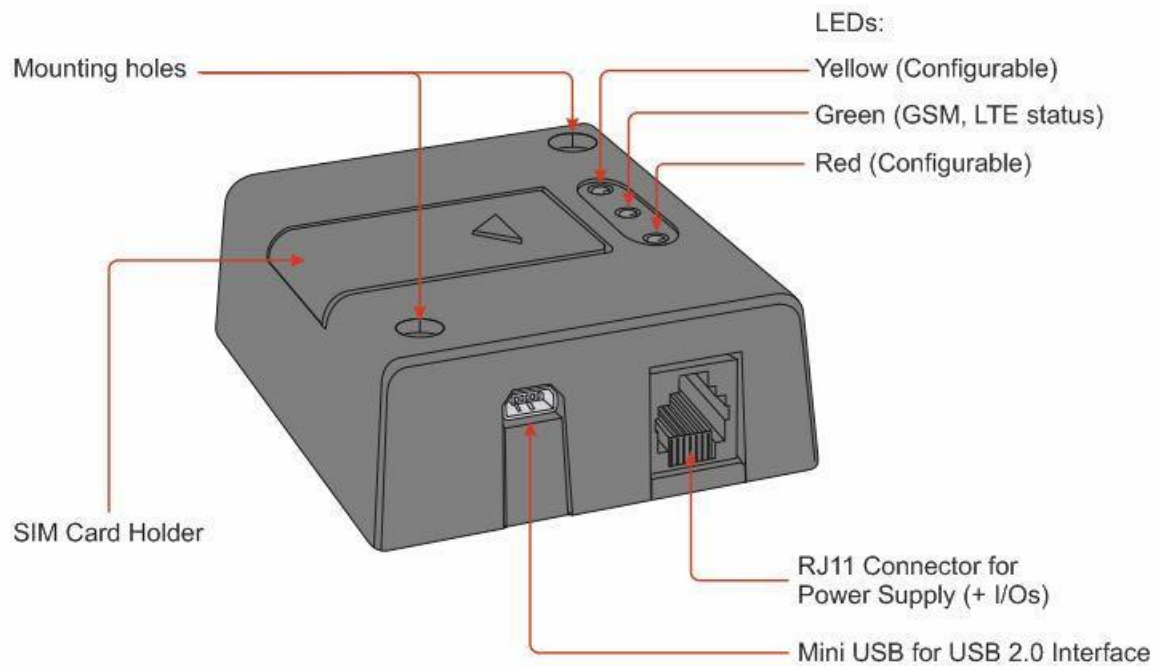


Figure 1: Connector on rear side of the Terminal

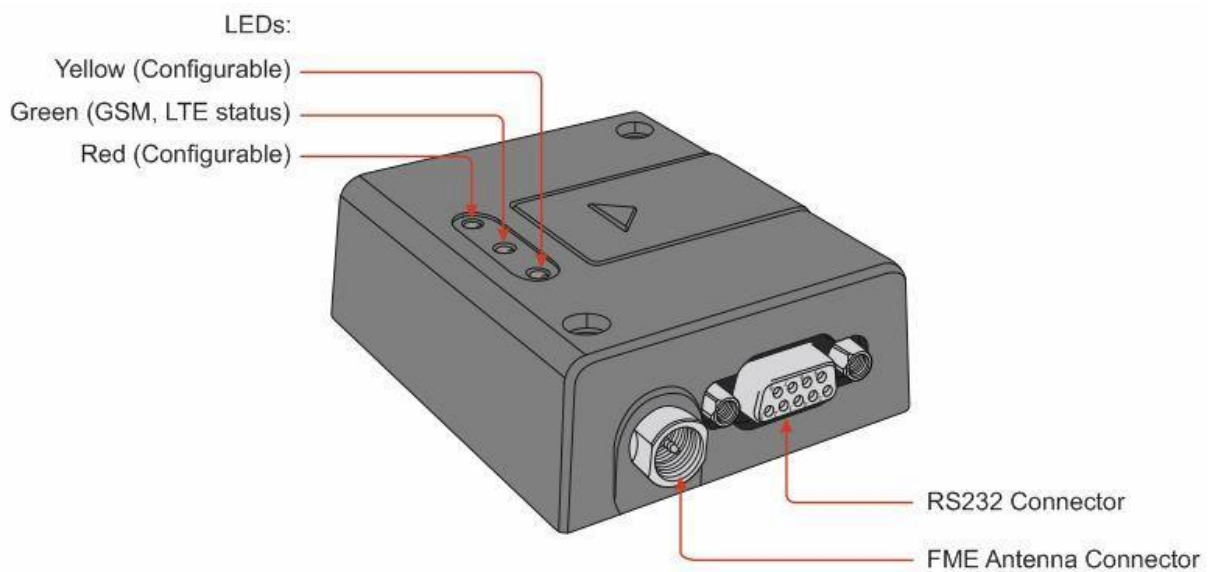


Figure 2: Connectors on front side of the Terminal

**PLEASE NOTE THE FOLLOWING:**


- The terminal can be securely fitted into your application by using the mounting holes positioned at the two corners of the device.
- The SIM card can be inserted into the modem without the need for any tools.
- Section 4 Electrical Description "2. Electrical Description" describes the pins and electrical characteristics of the modem's terminal's various connectors are described in
- Section 4.2 Antenna Connector "2.3 Antenna Connector" provides information about the antenna connector is found in "2.3 Antenna Connector"



Special DIN Rail Mounting Brackets (Art-nr. 12304 or Art-nr. 12305) is available as an accessory item which allows installation of the modem in industrial environments using DIN Rails. For more details of our accessories please check chapter 2.5 Telic Certified Accessories.

## 2.2 Identification

On the bottom of the device, you will find the type label.

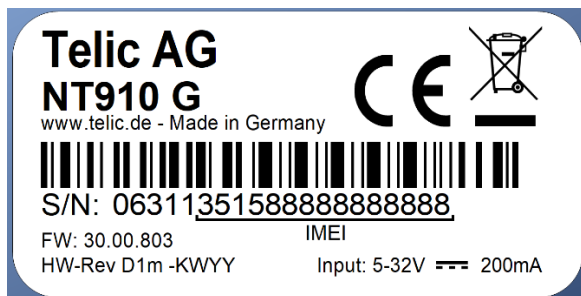

Label	Description
S/N	Serial number <sup>1</sup>
	Serial number
IMEI	International Mobile Equipment Identity
HW-Rev.	Hardware Revision Number
CE	CE Verification mark
	Disposal in accordance with European Directive RED 2014/53/EU

## 2.3 Physical Dimensions and Weight

Overall dimensions: 77 x 66 x 26 mm

Weight: 91g

<sup>1</sup> Note that the serial number consists of a 4-digit product ID followed by the device's IMEI.



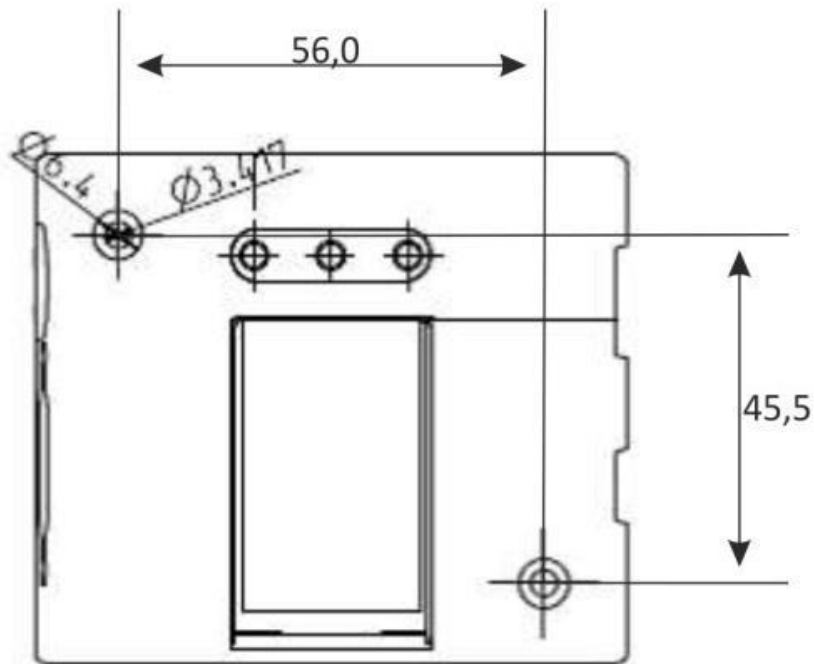


Figure 3: Drawing of the Terminal's Housing

## 2.4 Product Features and Technical Data

### NOTICE

Telic AG may, at any time and without notice, make changes or improvements to the products and services offered and / or cease producing or commercializing them.

### NOTICE – Optional Features

Features identified as "Optional" in this document are not assembled by default. Please contact our Sales Team at <https://www.telic.de/en/contacts/contact-us> to clarify the details of ordering terminal variants.

Category	Features	Details
Air Interface	GSM Frequency Bands	B2(1900) / B3(1800) / B5(850) / B8(900)
	LTE Frequency Bands	B1(2100) / B2(1900) / B3(1800) / B4(AWS1700) / B5(850) / B8(900) / B12(700) / B13(700) / B18(800) /

		B19(800) / B20(800) / B26(850) / B28(700)
Hardware Features	IP Protection	IP40
	SIM Card Holder	1x (1,8/3 Volt) Size: 25 x 15 mm Mini-SIM, Form Factor: 2FF SIM Chip Option: Yes
	LEDs	1x Mobile communications 2x Configurable
	Type Approvals	CE
Connectors	D-Sub (9-pin)	1x Female (RS232)
	USB	1x Mini-USB (USB 2.0)
	RJ11	1x Power + IOs (1x Analogue Input; 1x Output)
	RS232	1x (Sub-D9 Female)
	USB 2.0	1x (Mini-USB) (USB 2.0)
Software	AT Command Set	3GPP TS 27.005, 27.007 and Telit custom AT
	Programming Language	C (Telit AppZone IDE)
	SIM Application Toolkit	SAT Release 99
	TCP/IP Stack	TCP, UDP, SSL Pv4/IPv6 stack with TCP and UDP protocol
	SW Update	Serial / USB / FOTA
Power Management	Voltage Range	5V - 32V direct current
Hardware Characteristics	Operating Temperature	-30°C to +75°C
	Dimensions	77 x 66 x 26 mm
	Weight	91g

Table 3: Feature Overview

## 2.5 Telic Certified Accessories

### NOTICE

The pentaband antennas listed in this section are suitable both for use with GSM and LTE networks. Please check, though, which frequency bands your mobile network service provider supports specifically for LTE Cat-1. Eventually, you might need to purchase a dedicated antenna to cover the 2600 MHz band. Please contact us if you require specific recommendations on suitable antennas to use.

Product	Picture	Short summary	Part Number
Magnetic antenna		Magnetic antenna FME female connector, 3m cable Frequencies: 850, 900, 1800, 1900, 2100 MHz Dimensions: 72 mm x 31 mm	12021
Rectangular antenna		Rectangular antenna FME female connector Frequencies: 850, 900, 1800, 1900, 2100 MHz Dimensions: 53mm x 6,7 - 9,65mm	12016
Stub antenna		Stub antenna FME female connector Frequencies: 850, 900, 1800, 1900, 2100 MHz Dimensions: 61mm x 6,7 - 9,65mm	12019
Roof antenna		Roof antenna GSM FME female connector Waterproof, 2,5m cable Frequencies: 850, 900, 1800, 1900, 2100 MHz Dimensions (after mounting): 77 mm x 15mm	12006
Patch antenna		Patch antenna FME female connector 3m cable Frequencies: 850, 900, 1800, 1900, 2100 MHz Dimensions: 6.7mm x 116mm x 22mm	12020
Magnetic antenna LTE		FME female connector 3m Frequencies: 698-960 MHz, 1710-2170 MHz, 2500-2700 MHz Dimensions: 31 x 72 mm	74672
Rectangular antenna LTE		FME female connector Frequencies: 824~894/1710~2690MHz Dimensions: 9 x 61 mm	74673
Stub antenna LTE		FME-female connector Frequencies: 824~894/1710~2690MHz Dimensions: 18 x 55,5 mm	74705

Product	Picture	Short summary	Part Number
DIN Rail Mounting Bracket Rectangular		DIN Rail adapter (rectangular)	12304
DIN Rail Mounting Bracket Straight		DIN Rail adapter (straight)	12305
Terminal Power Supply		Power supply 6pin Mini Western-Plug, Input 100- 240V AC Output 12V DC, 1,5A Length: 1500±50mm	12002
Terminal Power Cable		Power cable Length: 1500 ± 30	12003
RS232 Cable		RS232 cable, 9-pin Sub-D-connector, male/female Length: 2m	12004
Mini USB to USB-A Cable		USB cable for terminals: - for I/O Connection (GT864 PY) - for Audio Connection (GT864 Quad) Length: 600±20mm	12301
Mini USB to Open Ended Cable		USB cable to mini USB Length: 1000±30mm	12302

Table 4: Accessories List

Please contact your distributor or Telic AG for availability or check Telic's webpage <http://www.telic.de>.

## 3 Safety and Product Care

This device has been designed in accordance with industrial standards, manufactured with utmost care using high-quality materials, and thoroughly tested. Nevertheless, its use may constitute a risk to persons or cause material damage.

The following safety instructions must be followed to ensure the safety of users and of the device.

### NOTICE

---

If these instructions are ignored, Telic AG will not assume responsibility for any damages that are incurred. Telic AG may refuse warranty claims where evidence of product misuse is found.

---

Please read the information in this section and the information in Section 6 Installation of the modem before starting your integration work!

## 3.1 Audience and Intended Use

This terminal product is targeted towards system integrators who need to add a wireless communications link to their M2M / IoT application to capture data from the application as well as to remotely control that application. Any other use is not intended.

## 3.2 Safety instructions

PLEASE READ THESE SAFETY INSTRUCTIONS AND KEEP A COPY OF THEM.

The NT910 G Terminal contains highly integrated components which can be damaged by electrostatic discharge if the user would open the housing.



Therefore, only touch the NT910 G Terminal on the housing or connectors and avoid touching the components on the board.

- Always ensure that the use of the modem is permitted. The modem may present a hazard if used in the proximity of personal medical electronic devices. As a rule, the modem must not be used in hospitals, airports or planes.
- Never use the modem at a gas station, refueling point, blasting area or in any other environment where explosives may be present.
- Operating the modem close to other electronic devices, such as antennas, television sets, and radios may cause electromagnetic interference.
- This product is intended to be used with the antenna or other radiating element at least 20 cm away from any part of the human body. In applications where this rule cannot be applied, the application designer is responsible for providing the SAR measurement test report and declaration.
- You are responsible for observing your country's safety standards, and where applicable, the relevant wiring rules.

### Warning



When using products which are exposed to electric voltage the valid regulations have to be observed.

Always make sure that the device is disconnected from the power supply before opening it.

You should only use tools on components, modules or devices if they are disconnected from the power supply and the electric charge, which may still be stored in some components inside the device, has been discharged.

All cables and wires which are energized and connected to the device, the module or components must be checked regularly for any damage of the isolation shield or fractures of the cables. If the supply cables are visibly damaged the device must be taken out of operation immediately until the faulty cable has been replaced.

When using components or modules, the specification given in the corresponding description of these components must strictly be observed. The device shall be operated only by appropriately qualified personnel.

This device shall only be used for its intended purpose.

Please note that we are not responsible for any errors in usage of wireless connections. Therefore, we cannot accept any responsibility for consequential loss.

In case measurements with the opened housing are necessary, an isolating-transformer must be integrated for safety reasons. Alternatively, the voltage can be supplied by an appropriate power supply which complies with the safety regulations. All wiring work must be done in a voltage free state only.

### 3.3 General precautions

The NT910 G Terminal as a stand-alone item is designed for indoor use only. To use outside it must be integrated into a weatherproof enclosure. Do not exceed the environmental and electrical limits as specified in Section 2.4 Product Features and Technical Data.

- Avoid exposing the modem to lighted cigarettes, naked flames or to extreme hot or cold temperatures.
- Never try to dismantle the modem yourself. There are no components inside the modem that can be serviced by the user. If you attempt to dismantle the modem, you will invalidate the warranty.
- The NT910 G Terminal must not be installed or located where the surface temperature of the plastic case may exceed 75°C.
- All cables connected to the NT910 G Terminal must be secured or clamped, immediately adjacent to the modem's connectors, to provide strain relief and to avoid transmitting excessive vibration to the modem in the installation.
- Ensure the cables, supplying power, and input cable to the NT910 G Terminal do not exceed 3 meters.
- To protect power supply cables and meet the fire safety requirements when the unit is powered from a battery or a high current supply, connect a fast 1.25A fuse in line with the positive supply.
- Do not connect any incompatible component or product to the NT910 G Terminal.

## 3.4 SIM card precautions

Before handling the SIM card in your application, ensure that you are not charged with static electricity. Use proper precautions to avoid electrostatic discharges.

When the SIM card hatch is opened, the SIM card connectors lie exposed under the SIM card holder.



Caution! Do not touch these connectors! If you do, you may release an electrical discharge that could damage the modem or the SIM card.

When designing your application, the SIM card's accessibility should be considered. We always recommend that you have the SIM card protected by a PIN code. This will ensure that the SIM card cannot be used by an unauthorized person.

## 3.5 Antenna precautions

Consider the risk of lightning in case the antenna is to be mounted outside. Follow the instructions provided by the antenna manufacturer.

### NOTICE

Please note that this LTE device is designed for use with one single antenna only. It does not support antenna diversity.

- Never connect more than one modem to a single antenna. The modem can be damaged by radio frequency energy from the transmitter of another modem.
- Like any mobile station, the antenna of the modem emits radio frequency energy. To avoid EMI (electromagnetic interference), you must determine whether the application itself, or equipment in the application's proximity, needs further protection against radio emission and the disturbances it might cause. Protection is secured either by shielding the surrounding electronics or by moving the antenna away from the electronics and the external signals cable.
- The modem and antenna may be damaged if either come into contact with ground potentials other than the one in your application. Beware, ground potential is not always what it appears to be.

## 3.6 Storage Conditions

The following environmental limits must be maintained in order to safely store the terminal and ensure that it remains functional until a maximum of 12 months:

- Storage temperature: from 5°C to 35°C
- Humidity: <75% relative humidity.

## 4 Electrical Description

The modem uses the following standard connectors:

- RJ11 6-way (power + 1 analogue input + 1 optional output)
- Mini USB (for data) – Also the power connector for the USB powered variant (optional)
- SIM card reader
- FME male coaxial jack (antenna connector)
- Sub-D female socket, 9 pin (RS232 serial port)

### 4.1 Power Connector

An RJ11 6-way connector, as shown and described below, serves as a means of supplying and controlling DC power to the modem. The use of an external power supply is necessary as the USB port is not intended to be used as power source.

The supply voltage VCC required by the modem is 5V - 32V DC. Please note that applying the supply voltage does not switch the modem on. To do so an additional active-high control signal, TO\_IN, must be applied for > 1 second.

Please see chapter 5.1 Switch ON the modem for further important details about TO\_IN and power supply requirements, especially if TO\_IN is applied in parallel to VCC.



VCC and GND are reverse-polarity and over-voltage protected as long as the antenna interface and the user's application are not used or connected to separate grounds.

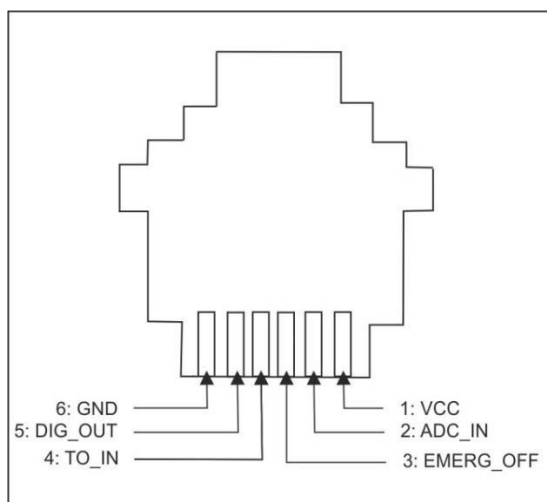


Figure 4: RJ11 Pin Connector

Pin	Signal	Direction	Limits	Description
1	VCC	Input	5 – 32V	Positive power input, DC
2	ADC_IN	Input	0-32V	Analogue Input



3	EMERG_OFF	Input	5 – 32V	Active high control line used to switch off the terminal VIH > 5V, VIL < .5V Power off: t > 1s
4	TO_IN	Input	5 – 32V	Positive edge triggered signal; used to switch on the modem VIH > 5V, VIL < 0.5V Power on: t > 1s after VCC available VIH = Voltage Input high VIL = Voltage Input low
5	DIG_OUT	Output	5 - VCC	(Optional) Digital Output VCC, max. 400 mA
6	GND	Input	-	Negative power (ground) input and return path for TO_IN and EMERG_OFF

Table 5: RJ11 Pin and Signals Description

## 4.2 Antenna Connector

### ME910C1-WW

Item	Value
Frequency range	Depending by frequency band(s) provided by the network operator, the customer shall use the most suitable antenna for that/those band(s)
Bandwidth	250 MHz in LTE Band 1 140 MHz in LTE Band B2, PCS1900 170 MHz in LTE Band 3, DCS1800 445 MHz in LTE Band 4 70 MHz in LTE Band 5, GSM850 60 MHz in LTE Band 18 60 MHz in LTE Band 19 80 MHz in LTE Band 26 80 MHz in LTE Band 8, GSM900 71 MHz in LTE Band 20 110 MHz in LTE Band 28
Impedance	50 ohm
Input power	> 24dBm Average power
VSWR absolute max	≤ 10:1 (limit to avoid permanent damage)
VSWR recommended	≤ 2:1 (limit to fulfill all regulatory requirements)

## 4.3 SIM card reader

The Terminal is fitted with a SIM card reader designed for 1.8V and for 3V SIM cards. It is the flip-up type which is lockable in the horizontal position and is accessed through a removable panel.

Mini-SIM: Form Factor: 2FF - 25 x 15 mm.

## 4.4 RS232 Serial Port

The modem supports a standard RS232 serial interface via its 9 pin Sub-D connector, shown below. In line with serial communication terminology the Terminal should be considered as the data circuit-terminating equipment (DCE) and the external application or computer as the data terminating equipment (DTE). The maximum data rate to communicate with the NT910 G Terminal is 921,6 kBaud.

Pin	Signal	Direction	Limits	Description
1	DCD	Output	> + 4V < - 4 V	Data carrier detect
2	RD	Output	> + 4V < - 4 V	Received data
3	TD	Input	> + 2,4V < 0.8 V	Transmitted data
4	DTR	Input	> + 4V < 0.8 V	Data terminal ready
5	GND	-	0 V	Ground connection
6	DSR	Output	> + 4V < - 4 V	Data set ready
7	RTS	Input	> + 2,4V < 0.8 V	Request to send
8	CTS	Output	> + 4V < - 4 V	Clear to send
9	RI	Output	> + 4V < - 4 V	Ring indicator

Table 6: Electrical characteristics of the serial port signals

### 4.4.1 SERIAL DATA

The modem supports the standard data character format of

- Standard data rate is 115200 baud
- Programmable baud rate
- Auto-configuration mode

## 4.5 Mini USB Connector

Figure 5: Mini USB Type A/B connector gives an overview about the PIN Assignment of the Mini USB connector from the Standard NT910 G Terminal and also of the NT910 G USB Powered version (host powered). The Pin Assignment of the two versions is the same.

The modem supports a standard USB 2.0 Full Speed slave interface to receive AT-commands as well as data transmissions.

Drivers for Windows Desktop, Windows CE Embedded and instructions for Linux are available for download from the Telic AG website (for registered users only).

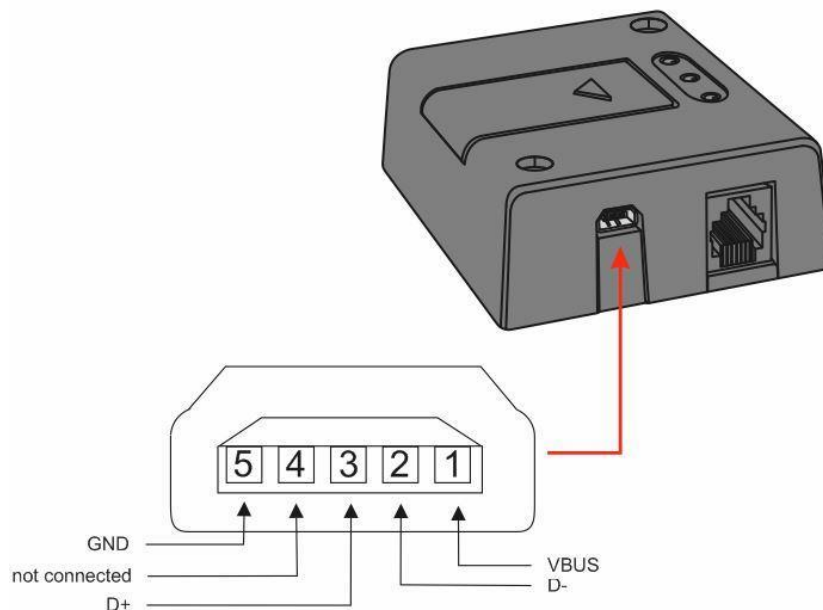


Figure 5: Mini USB Type A/B connector for NT910 G

## 5 Operation

### 5.1 Switch ON the modem

#### NOTICE

To ensure correct operation of the Terminal, please ensure that a SIM Card has been inserted into the terminal prior to switching it on.

Do not insert a SIM card into the device while it is switched on. If you find out that the device is switched on but missing a SIM card, first switch off the modem and then insert the SIM card.

Note that the device does not have a SIM card detect feature.

There are two ways to switch on the modem, once power is applied:

- assert TO\_IN to high level for > 5s
- activate the RS232 control line DTR for >0.2s

The modem is fully operational after 8 seconds. Logging onto a network may take longer than this and is outside the control of the modem. The modem can be configured to start up at the time power is applied by permanently tying power connector signals TO\_IN (pin 4) and VCC (pin 1) together.



DTR must be cycled from low to high.



The TO\_IN signal requires a positive "edge" (a sharp" signal transition from low to high) to turn the modem on. This transition should be a rising signal from 0V (GND) to VCC, or at least a large fraction of that voltage range, and must be applied at the same time as VCC or after it.

Very slow transitions (significantly slower than many milliseconds) or very small transitions (e.g. only few volts instead of 0V to VCC) will not turn on the module (since they are not considered to be a "positive edge").

Although this will not be an issue in almost all typical applications of the modem, there are a few cases in which the modem might not recognize the power up signal. This is no failure of the modem itself, the same would apply to almost any electronic device that provides a separate "power on" or "reset" signal.

Possible cases are the following:

- Large capacitors in your power supply which will lead to slow leading and falling edges (issue does not apply with modern stabilized switching regulator power-adaptors) AND TO\_IN tied in parallel to VCC (instead of separate dedicated digital signal)
- Slow analogue signals used to assert TO\_IN
- TO\_IN signal not before VCC

If you are in doubt, please

- Use the mains power adapter that is provided by your distributor and is known to work properly with your modem.
- Make sure that your signal and system design is according to the above.
- Consult our support team that will be more than happy to assist you.

## 5.2 Configuration of the bit rate on the serial interface

Please note that the module used in the terminal does not support auto baud. The configured data rate is 115200 baud.

- Data bits: 8
- Stop bits: 1
- Parity: none

## 5.3 Power cycle the modem

There are two ways to switch off (power down) the modem as described below:

- EMERG\_OFF to high level for  $t > 1s$  on the RJ11 connector
- Turn off, or disconnect the power supply.

## 5.4 Using low power mode of the modem

The NT910 G terminal supports a special ultra-low power mode which can be activated or deactivated by sending dedicated AT commands, which are described further below in this section. Please refer to Section 5.7 Current consumption Measurements for detailed power consumption values.

Low-power-mode doesn't work if the USB-Port is connected.

Activating the low power mode can also deactivate the RS232 Transceiver, which helps further reduce the power consumption. In some scenarios, however, this may not be desirable, as it may lead to data loss. Therefore, the following preconditions for using the low power mode need to be considered:

- There are no special precautions required when using a serial interface that is fully compliant with the RS232 specification (V.24) both on the DTE and DCE. You can proceed as described in the following sub-sections.
- If the DTR line is not available on the DTE (the M2M application), and you do not need to use the low power mode, then the DSR pin on DCE side should be looped with the DTR pin, as shown in the figure below. With this approach, the ultra-low-power mode will be permanently disabled.

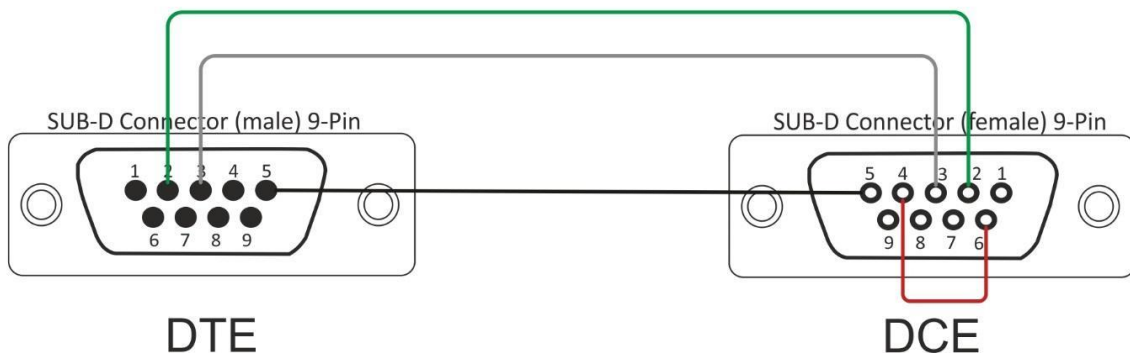


Figure 6: Looping the DSR with DTR pins to permanently deactivate low-power mode.

### 5.4.1 ENABLING THE LOW POWER MODE

- Wait until the GSM/LTE module is logged onto the GSM/LTE network
- Send the AT command `AT#SLED=0` for disabling the status LED
- Send the AT command `AT+CFUN=0` (section 3.1.2.26. of the AT command manual)
- Set the DTR control line from High level to Low level

#### NOTICE

Enabling low power mode as described herein also deactivates the RS232 transceiver!

### 5.4.2 DISABLING THE LOW POWER MODE BY USER

- Set the DTR control line from Low to High.
- Low-power mode should be exited automatically. After sending DTR from Low to High, the module doesn't save power, but the module is saving power again after setting DTR from High to Low.
- The RS232 transceiver is activated immediately.
- AT channel is available immediately after changing DTR from Low to High.
- Send AT command "AT+CFUN=1" to remain in normal mode.
- For setting the status LED back to alternate timings again send the AT command AT#SLED=4

### 5.4.3 DISABLING THE LOW POWER MODE UPON RECEIVING GSM ACTIVITY

- The terminal will be connected, in case of an incoming call
- DTR must be manually set to „high“ again
- Set RTS to "Low" and then to "High" for a working communication
- The device automatically jumps back to "AT+CFUN=1" when the RTS line is set high (if disabled before) set the status LED back to alternate timings

#### NOTICE

The user must set DTR line to high in order to activate the RS232 transceiver, this is not done automatically.

## 5.5 Operating states / green LED

The modem has a green power up LED, as depicted below, which is used to indicate various operating states. These states are described in following table.

Default setting:

- Set alternate GPIO function: at#gpio=1,0,2
- Set alternate Timings: at#sled=4
- Safe configuration: at#sledsav

SLED = 2,50 Operating state of LT910 E Terminal	green LED state
Device off	Permanently off
Net search / not registered	Fast blinking (period=1s, LEDon=0,5s)
Registered full service	Slow blinking (period=3s, LEDon=0,3s)
Low power mode activated	Permanently off

Table 7: Operating states of the green LED

## 5.6 Status LEDs (one yellow, one red)

The red and yellow Status LEDs are under control of GPIO1 and GPIO2 of the LE910 EU1 module inside the Terminal. They can be controlled via AT commands. The default status of these two LEDs is off. The following commands must be used to initialize and to configure the GPIOs to control the two LEDs:

```
Switching on red LED      at#gpio=2,1,1
Switching off red LED    at#gpio=2,0,1
Switching on yellow LED  at#gpio=3,1,1
Switching off yellow LED at#gpio=3,0,1
```

These LEDs can be controlled e.g. by an external microcontroller via AT commands issued to the terminal via the RS232 interface. They can be used to signal any useful status of the external application such as:

- error indication
- status of communication (LTE, GPRS, SMS, CSD, etc.)
- status of network (to simulate network LED)
- quality of service

## 5.7 Current consumption Measurements

The following table shows you the power consumption of the Terminal in different modes.

Status	[mA]@5V	[mA]@12V	[mA]@24V	[mA]@32V
NT910 G off (DTR low, no TO-IN)	0,5	1,3	2,6	3,5
NT910 G Idle Mode (DTR high, CREG=1)	25,2	12,6	9,6	9,4
NT910 G low power mode (AT+CFUN=0, DTR low, no USB)	3,7	2,9	3,8	4,6
NT910 active call, PL=5 (TCH: 0124; MS Power: 33dBm)	202	89	50	42
NT910 active call, PL=12 (TCH: 0124; MS Power: 19dBm)	138	61	36	32
NT910 active call, PL=19 (TCH: 0124; MS Power: 5dBm)	137	61	36	32

Table 8: Power consumption in standby, idle and low power mode and active call

## 5.8 Additional Software Configuration

### 5.8.1 ACTIVATING / DEACTIVATING LTE MODE

The terminal is configured by default with 2G / LTE mode activated (AT+WS46=30). The following commands can be used to modify the usage of mobile network technologies (refer also to Section 3.2.26. of the AT command manual for further details):

What do you want to do	Send the AT command	Device Response
Check the current setting	AT+WS46?	
2G Only mode is activated		+WS46: 12
LTE Only mode is activated		+WS46: 28
2G / LTE mode is activated		+WS46: 30
Activate 2G Only Mode	AT+WS46=12	
Activate 2G / LTE mode	AT+WS46=30	
Activate LTE Only Mode	AT+WS46=28	

### 5.8.2 CONFIGURING SPECIFIC FREQUENCY BAND

In case you are using an antenna which does not cover all frequencies specified in Section 4.2, you may configure a specific frequency band to be used with the AT command AT#BND.

## 6 Installation of the modem

This chapter gives you advice and helpful hints on how to integrate the NT910 G Terminal into your application from a hardware perspective. Please read the information given in Section 2 Product Description and then read the information in this section before starting your integration work.

### 6.1 Where to install the modem

There are several conditions which need to be taken into consideration when designing your application as they might affect the modem and its function. They are:

#### 6.1.1 ENVIRONMENTAL CONDITIONS

The modem must be installed so that the environmental conditions stated in Section 2.4 Product Features and Technical Data, such as temperature, humidity and vibration are satisfied. Additionally, the electrical specifications in Section 2.4 Product Features and Technical Data must not be exceeded.



### 6.1.2 GSM SIGNAL STRENGTH

The modem has to be placed in a way that ensures sufficient GSM signal strength. To improve signal strength, the antenna can be moved to another position. Signal strength may depend on how close the modem is to a radio base station. You must ensure that the location at which you intend to use the modem is within the network coverage area. Degradation in signal strength can be the result of a disturbance from another source, for example an electronic device in the immediate vicinity. More information about possible communication disturbances can be found in section 5.3.5.

When an application is completed, you can verify signal strength by issuing the AT command AT+CSQ. See "AT + CSQ Signal Strength".



Before installing the modem, use an ordinary mobile telephone to check a possible location for it. In determining the location for the modem and antenna, you should consider signal strength as well as cable length

### 6.1.3 CONNECTION OF COMPONENTS TO THE NT910 G TERMINAL

The integrator is responsible for the final integrated system. Incorrectly designed or installed external components may cause radiation limits to be exceeded. For instance, improperly made connections or improperly installed antennas can disturb the network and lead to malfunctions in the modem or equipment.

### 6.1.4 NETWORK AND SUBSCRIPTION

Before your application is used, you must ensure that your chosen network provides the necessary telecommunication services. Contact your service provider to obtain the necessary information.

- If you intend to use SMS in the application, ensure this is included in your (voice) subscription.
- Consider the choice of the supplementary services

## 6.2 How to install the modem

### 6.2.1 POWER SUPPLY

- Use a high-quality power supply cable with low resistance. This ensures that the voltages at the connector pins are within the allowed range, even during the maximum peak current.
- When the unit is powered from a battery or a high current supply, connect a fast 1.25A fuse in line with the positive supply. This protects the power cabling and modem.

### 6.2.2 SECURING THE MODEM

Before securing the modem take into account the amount of additional space required for the mating connectors and cables that will be used in the application.

- Where access is restricted, it may be easier to connect all the cables to the modem prior to securing it in the application.

- Securely attach the LT910 E Terminal modem to the host application using two 3mm diameter pan-head screws.

## 6.3 Antenna

### 6.3.1 GENERAL

The antenna is the component in your system that maintains the radio link between the network and the modem. Since the antenna transmits and receives electromagnetic energy, its efficient function will depend on:

- the type of antenna (for example, circular or directional);
- the placement of the antenna;
- Communication disturbances in the vicinity of the antenna.

The following sections address issues concerning antenna type, antenna placement, antenna cable, and possible communication disturbances. In any event, you should contact your antenna manufacturer for additional information concerning antenna type, cables, connectors, antenna placement, and the surrounding area. You should also determine whether the antenna needs to be grounded or not. Your antenna manufacturer might be able to design a special antenna suitable for the application.

### 6.3.2 ANTENNA TYPE

Make sure that the selected antenna meets the requirements specified in Section 4.2 ("Antenna Connector").

### 6.3.3 ANTENNA PLACEMENT

The antenna should be placed away from electronic devices or other antennas. The recommended minimum distance between adjacent antennas, operating in a similar radio frequency band, is at least 50cm. If signal strength is weak, it is useful to face a directional antenna at the closest radio base station. This can increase the strength of the signal received by the modem. The modem's peak output power can reach 2W. RF field strength varies with antenna type and distance. At 10cm from the antenna the field strength may be up to 70V/m and at 1m it will have reduced to 7V/m. In general, CE-marked products for residential and commercial areas, and light industry can withstand a minimum of 3V/m.

### 6.3.4 THE ANTENNA CABLE

Use 50Ω impedance low-loss cable and high-quality 50Ω impedance connectors (frequency range up to 2GHz) to avoid RF losses. Ensure that the antenna cable is as short as possible. The Voltage Standing-Wave Ratio (VSWR) may depend on the effectiveness of the antenna, cable and connectors. In addition, if you use an adapter between the antenna cable and the antenna connector, it is crucial

that the antenna cable is a high-quality, low-loss cable. Minimize the use of extension cables, connectors and adapters. Each additional cable, connector or adapter causes a loss of signal power.

### 6.3.5 POSSIBLE COMMUNICATIONS DISTURBANCES

Possible communication disturbances include the following:

- **Noise** can be caused by electronic devices and radio transmitters.
- **Path-loss** occurs as the strength of the received signal steadily decreases in proportion to the distance from the transmitter.
- **Shadowing** is a form of environmental attenuation of radio signals caused by hills, buildings, trees or even vehicles. This can be a particular problem inside buildings, especially if the walls are thick and reinforced.
- **Multi-path fading** is a sudden decrease or increase in the signal strength. This is the result of interference caused when direct and reflected signals reach the antenna simultaneously. Surfaces such as buildings, streets, vehicles, etc., can reflect signals.
- **Hand-over** occurs as you move from one cell to another in the GSM network. Your mobile application call is transferred from one cell to the next. Hand-over can briefly interfere with communication and may cause a delay, or at worst, a disruption.